



FIELD SERVICE NEWS

FUJI HEAVY INDUSTRIES LTD.

HEAD OFFICE

: SUBARU BLDG,

SHINJUKU, TOKYO, JAPAN

NO : FAN-018

DATE : May 15, 1971

FA-200 MAIN LANDING GEAR

INSTALLING DIRECTION OF WHEEL ASSEMBLY SEAL

This FAS-018 is prepared to show the correct installing direction of seal, P/N: 9524218, used on the subject wheel assembly.

It is necessary to disassemble the wheel assembly in order to replace tire or to lubricate bearings, P/N: 13889. When reassembling removed parts, the seal, P/N: 9524218, may be installed incorrectly, with its metal surface mated to bearing. If this occurs, the seal will rotate and be damaged in a short time. This may also impart damage to the mating bearing, resulting in an accident.

It is, therefore, requested that the following instruction should be strictly observed: (See figure 1.)

1. Install seal, P/N: 9524218, with stamped "BEARING SIDE" mated to bearing, P/N: 13889.

FAN - 018

PAGE 1 OF 2

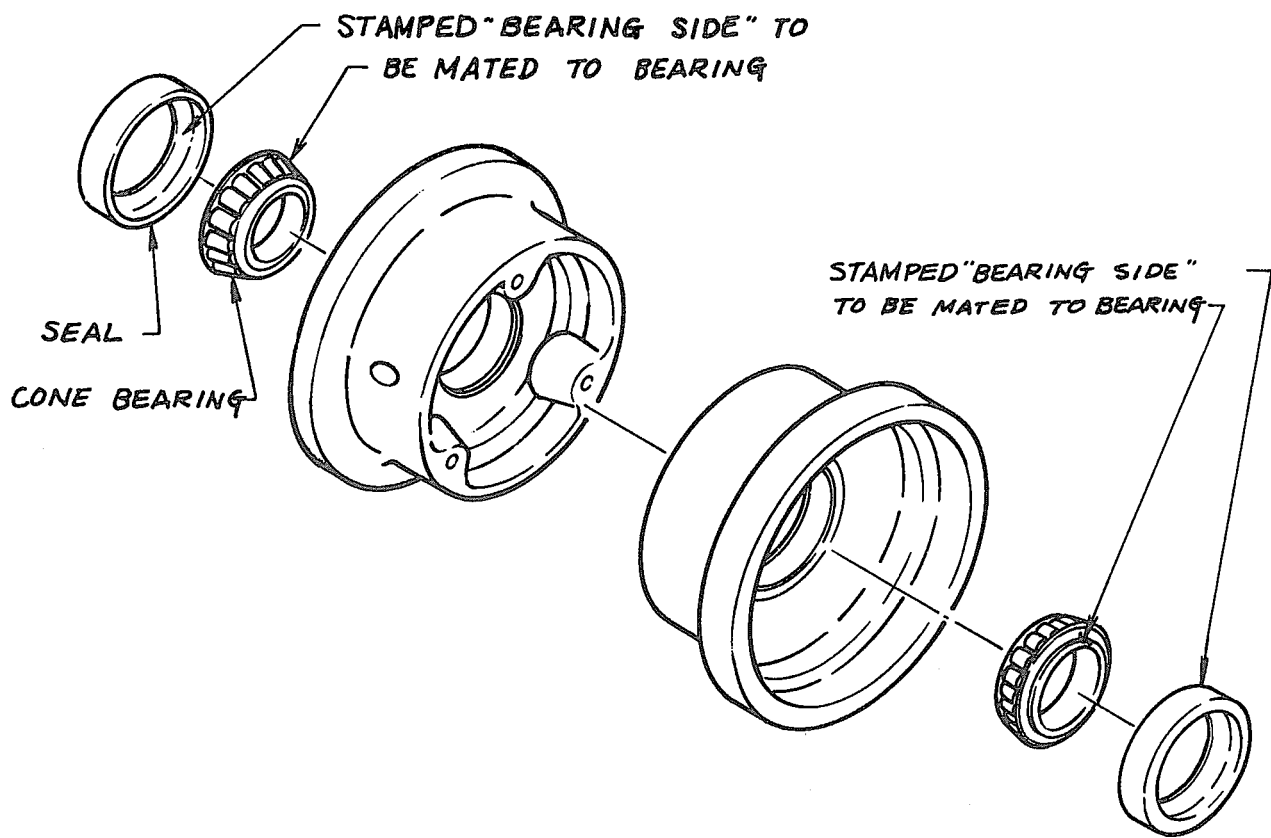


FIG. 1 BEARING AND SEAL ASSEMBLY