

FIELD SERVICE NEWS

FUJI HEAVY INDUSTRIES LTD.

HEAD OFFICE

: SUBARU BLDG.

SHINJUKU. TOKYO. JAPAN

NO : FAN-030

DATE: April 10, 1973




INSTALLATION PROCEDURES

FOR

EMERGENCY SIGNAL BOX

There has been an instance reported whereby the emergency signal box slipped off the attaching bracket on the firewall during taxiing, and interefered with the aileron chain as shown in the accompanying figure. As a result, the slipped box prevented the pilot from pulling the control wheel.

A close investigation revealed that the store box had not been correctly secured to the attaching bracket on the firewall - the two dowels not inserted in the mating holes in the bracket. It has been also confirmed that such a failure will never occure if the box is seated firmly in place.

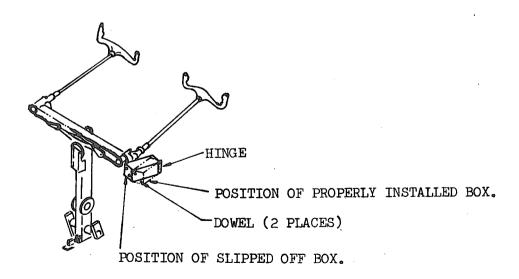

- It is, therefore, requested that the emergency signal box be installed properly in accordance with the procedures stated belows:
- 1. Check the attaching bracket and dowel insert holes for general conditions.
- 2. Check the hinge on structure for general conditions.
- 3. Check the hinge and dowels on the store box for general conditions.
- 4. Move L.H. fwd seat to the most rearward position.
- 5. Insert the two dowels into the mating holes in the bracket.
- 6. Make sure that the dowels are inserted in holes; then, align hinge loop holes and insert the hinge pin in place.
- 7. By shaking it with hand, check to assure that the box is seated firmly in place.