

JCS APPROVED

NO. 200-051 DATE R2. 12. 16

(SUPERSEDES NO.)

REV. A DATE R3. 3. 2

(SUPERSEDES NO.)

REASON 8 頁目に誤った頁が記載されていたため差し替えを行った。

高度計の代替品追加に伴うマニュアルの一部改訂について

高度計の代替品を追加するための型式設計変更について、航空局の承認（第 20-19-A001 号（2020. 10. 20）及び第 22-16-A001 号（2020. 10. 20））を受けました。これに伴い、マニュアルの内容に一部変更が生じたので、その改訂内容をお知らせ致します。

下記要領に従い該当頁を差換えて使用して下さい。

1. パーツ・カタログ

マニュアル No.	本紙頁	パーツ・カタログの頁
FA200-201	3～ 6	6-3 / 6-4, 6-12 / 6-13
FA200-202	7～10	6-2 / 6-3, 6-13 / 6-14

(Blank Page)



 
FIG & INDEX NO.	PART NO.	DESCRIPTION	UNITS PER ASS'Y	USABLE ON CODE
		1234567		
25		INSTRUMENTS PANEL		
- 1	200-324122-003	•PANEL ASSEMBLY.....	1	E
	200-324122-031	•PANEL ASSEMBLY.....	1	F
- 2	MS35206-219	••SCREW	3	E
	MS35206-215	••SCREW	3	F
	MS24693-S8	••SCREW	1	E
	MS24693-S4	••SCREW	1	F
	NAS679A04W	•NUT.....	4	
- 3	A-5771-MR-1	•BUSHING, SHOCK (USR).....	4	
- 4	A-5770-MR-1	•MOUNT, SHOCK (USR)	4	
- 5	AN8013D2	•WASHER.....	4	
	or F-0211-101			
- 6	200-324128-003	•SPACER.....	4	
- 7	NAS43DD4-7	•SPACER.....	4	
- 8	200-324125-003	•BOLT	4	
	AN935-416	•WASHER, SPRING.....	4	
	AN315-4R	•NUT.....	4	
- 9	MS25083-1BC4	•JUMPER, BONDING.....	2	
		/ATTACHING PARTS/		
	MS35206-246	•SCERW.....	1	
	AN960D8	•WASHER.....	2	
	AN935-8	•WASHER.....	1	
	NAS679A08W	•NUT.....	1	
		----- * -----		
- 10	200-324122-005	•PANEL ASSEMBLY.....	1	
		/ATTACHING PARTS/		
	MS35206-246	•SCERW.....	12	
	AN960D8	•WASHER.....	12	
		----- * -----		
- 11	200-324122-017	••LID, BOX	1	
- 12	200-324003-003	••KNOB.....	1	
		/ATTACHING PARTS/		
	MS24693-S32	••SCREW	1	
	AN960D6	••WASHER.....	1	
	NAS679A06W	••NUT.....	1	
		----- * -----		
- 13	MS24693-S8	••SCREW	4	
	NAS679A04W	••NUT.....	4	
- 14	SA-4	•INDICATOR, AIR SPEED (TTK)	1	
	or SA-40-1R	/ATTACHING PARTS/		
	NAS487-13	•NUT.....	4	E
	NAS487-21	•NUT.....	4	F
	MS35206-234	•SCERW.....	4	
		----- * -----		
- 15	LA-4 or LA-40-1			
	LA-71-11			
	or 5934-3			
	or 5934P-3			
	or 5934M-3			
	or 5934PM-3			
	or 5934D-3	•INDICATOR, ALTIMETER (TKK or UI)	1	
	or 5934PD-3	/ATTACHING PARTS/		
	NAS487-13	•NUT.....	3	E
	NAS487-21	•NUT.....	3	F
	MS35206-232	•SCERW.....	3	E
	MS35206-233	•SCERW.....	3	F
		----- * -----		

ISSUED: NOVEMBER 2020

 


FIG & INDEX NO.	PART NO.	DESCRIPTION 1234567	UNITS PER ASS'Y	USABLE ON CODE
25 - 16	PM41-1 or 22-260-01-1A	GAUGE, MANIFOLD PRESS (HEW or WS) (SEE FIGURE 30, FOR FA-200-160)..... /ATTACHING PARTS/	1	B
	MS35206-232	•SCREW	4	
	NAS487-13	•NUT	4	
		----- * -----		
- 17	RE-5 or RE-51-1	•TACHOMETER (TKK)	1	
		/ATTACHING PARTS/		
	MS35206-232	•SCREW	4	
	NAS43DD1-20	•SPACER	4	F
	NAS487-13	•NUT	4	F
		----- * -----		
- 18	QF-2	•INDICATOR, FUEL QUANTITY (TKK).....	2	
		/ATTACHING PARTS/		
	200-324152-003	•SPACER	2	F
		----- * -----		
- 19	RN24962-1	•AMMETER (SCA)	1	
		/ATTACHING PARTS/		
	200-324152-005	•SPACER	1	F
		----- * -----		
- 20	PF-4	•GAUGE, FUEL PRESS (TKK)	1	A
	PF-5-1	•GAUGE, FUEL PRESS (TKK)	1	BF
	PF-60-1	•GAUGE, FUEL PRESS (TKK)	1	BF
		/ATTACHING PARTS/		
	NAS487-13	•NUT	4	
	MS35206-232	•SCREW	4	
		----- * -----		
- 21	OT-4	•INDICATOR, OIL TEMPERATURE (TKK)	1	
		/ATTACHING PARTS/		
	NAS487-13	•NUT	4	
	MS35206-232	•SCREW	4	
		----- * -----		
- 22	PO-3	•GAUGE, OIL PRESS (TKK)	1	
		/ATTACHING PARTS/		
	NAS487-13	•NUT	4	
	MS35206-232	•SCREW	4	
		----- * -----		
- 23	200-324121-005	•PANEL ASSEMBLY	1	
		/ATTACHING PARTS/		
- 24	NAS220-8	•SCREW	8	
	AN960D8L	•WASHER	16	
	NAS679A08	•NUT	8	
- 25	NAS220-8	•SCREW	8	
	AN960D8L	•WASHER	8	
- 26	NAS220-8	•SCREW	4	
	AN960D8L	•WASHER	4	
	NAS679A08	•NUT	4	
- 27	MS35206-245	•SCREW	6	
	AN960D8	•WASHER	6	
	NAS679A08	•NUT	6	
		----- * -----		

OCHANGE:MARCH 1973

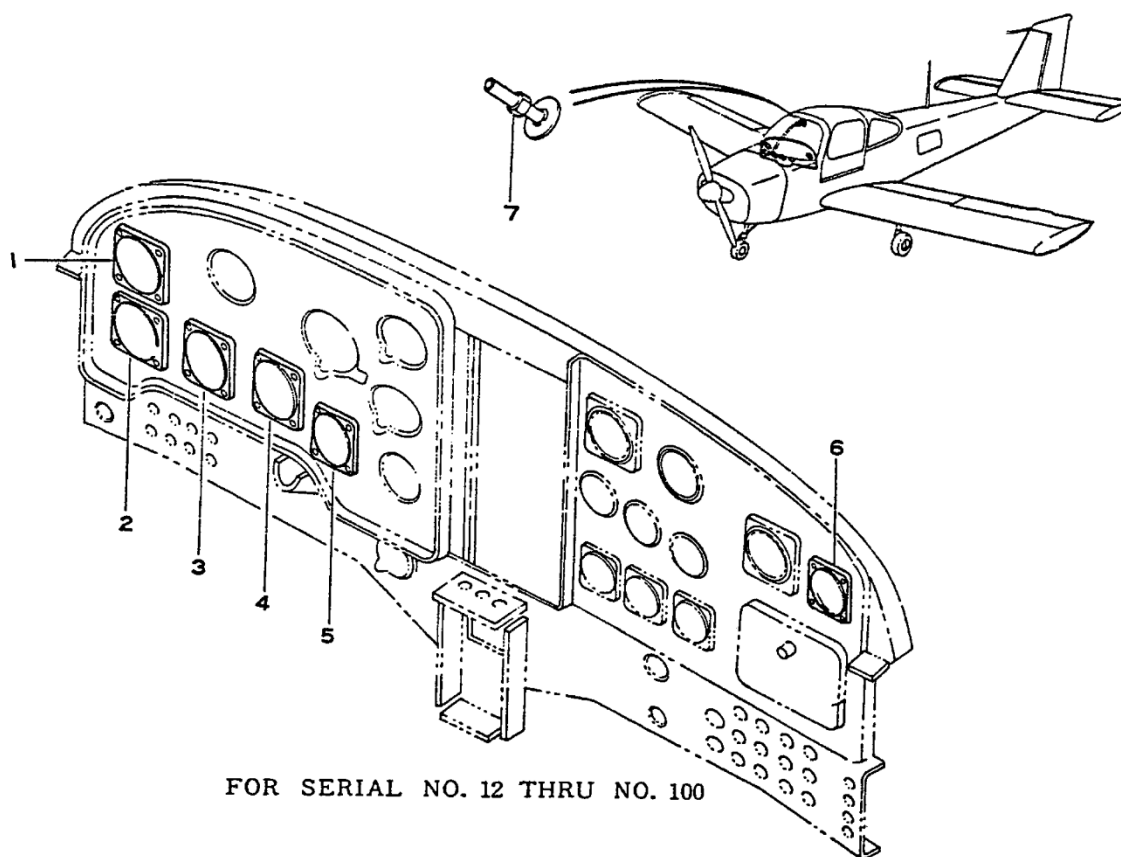

FOR SERIAL NO. 12 THRU NO. 100

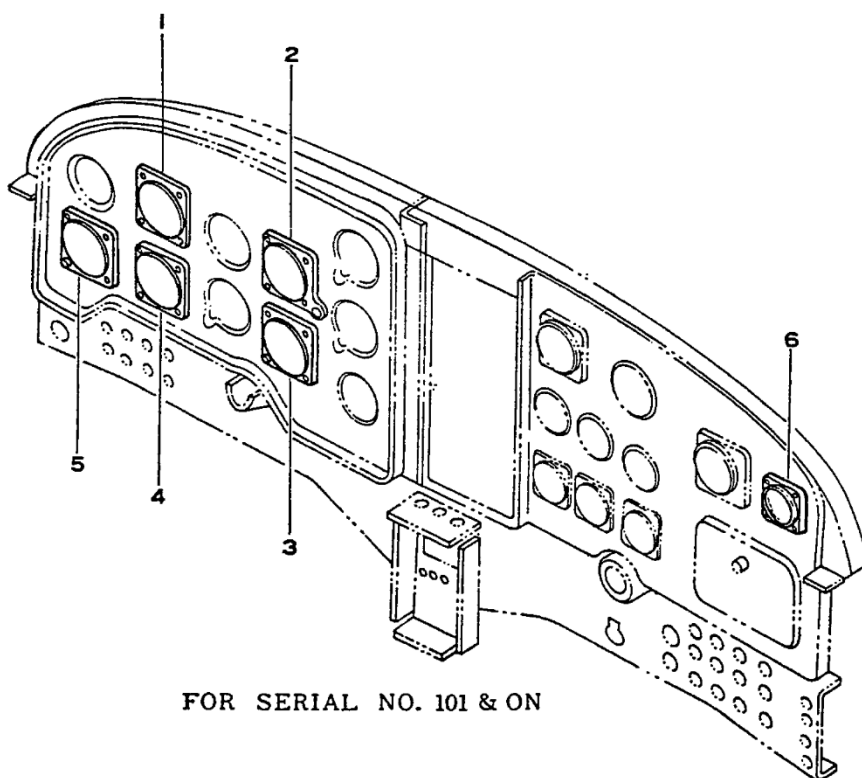

FOR SERIAL NO. 101 & ON

FIGURE 28. INSTRUMENTS

ISSUED: NOVEMBER 1970

 
SECTION VI
INSTRUMENTS GROUP



INSTRUMENTS

FIG & INDEX NO.	PART NO.	DESCRIPTION	UNITS PER ASS'Y	USABLE ON CODE
		1234567		
28		INSTRUMENTS		
-1	SA-40-1RA	•INDICATOR, AIR SPEED, KNOTS (TKK)..... /ATTACHING PARTS/	1	
	NAS487-13	•NUT.....	4	
	MS35206-234	•SCREW..... ----- * -----	4	
-2	LA-40-1A or LA-40-1 or LA-4-1 or LA-71-11 or LA-71-11A or 5934-3 or 5934P-3 or 5934M-3 or 5934PM-3 or 5934D-3 or 5934PD-3 NAS487-13 MS35206-232	•INDICATOR, ALTIMETER (TKK or UI)..... /ATTACHING PARTS/ •NUT..... •SCREW..... ----- * -----	1 3 3	
-3	CA-52-1 or 22-201-01-1A or 7000C.2 or 7000C.31	•INDICATOR, RATE OF CLIMB (TKK or WS or UI) (DIAL CONFIGURATION: 7000C.2 (SOLID TYPE), 7000C.31 (SPLIT TYPE)) /ATTACHING PARTS/	1	
	NAS487-13	•NUT.....	3	A
	NAS487-21	•NUT.....	3	B
	MS35206-232	•SCREW.....	3	A
	MS35206-234	•SCREW..... ----- * -----	3	B
-4	TE-3 or 23-324-01 NAS487-13 NAS487-21 MS35206-232 MS32506-233	•INDICATOR, TURN AND SLIP (TKK or WS)..... /ATTACHING PARTS/ •NUT..... •NUT..... •SCREW..... •SCREW..... ----- * -----	1 4 3 4 3	 A B A B
-5	22-101-05-A AN5743-2 or A-11-90 or W-33-7510-ET NAS487-13 MS35206-232	•CLOCK (WS or LW or WW)..... /ATTACHING PARTS/ •NUT..... •SCREW..... ----- * -----	1 2 2	
-6	MS28025-1 or 22-580-01-A or 22-580-05-1A	•ACCELEROMETER (TKK or TKS or WS) /ATTACHING PARTS/ •NUT..... •SCREW..... ----- * -----	1 3 3	
-7	2716 or OB-11-1A	•INDICATOR FREE AIR TEMP..... (SCI or TKK) AFOR SERIAL NO. 12 THRU NO. 100 BFOR SERIAL NO. 101 & ON	1	

ISSUED: NOVEMBER 2020

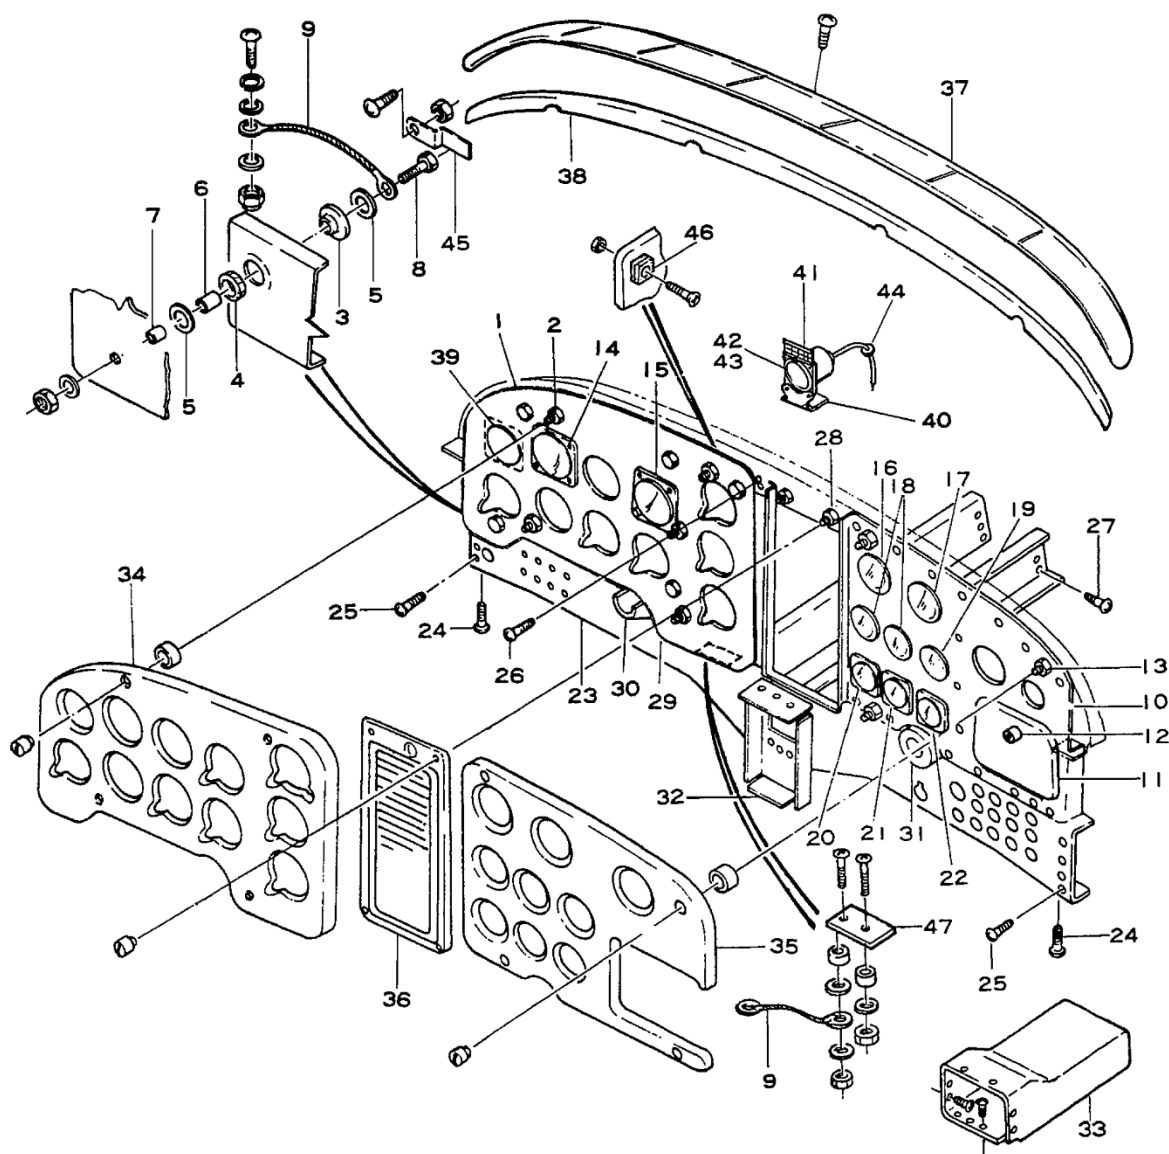

SERVICE NEWS 200-051A
PAGE 7 OF 10



FIG & INDEX NO.	PART NO.	DESCRIPTION	UNITS PER ASS'Y	USABLE ON CODE
		1234567		
23		INSTRUMENTS PANEL		
-1	200-324122-031	•PANEL ASSEMBLY	1	
-2	MS35206-215	••SCREW	3	
	MS24693-S4	••SCREW	1	
	NAS679A04W	••NUT	4	
-3	A-5771-MR-1	•BUSHING, SHOCK (USR)	4	
-4	A-5770-MR-1	•MOUNT, SHOCK (USR)	4	
-5	AN8013D2	•WASHER	4	
	or F-0211-101			
-6	200-324128-003	•SPACER	4	
-7	NAS43DD4-7	•SPACER	4	
-8	200-324125-003	•BOLT	4	
	AN935-416	•WASHER, SPRING	4	
	AN315-4R	•NUT	4	
-9	MS25083-1BC4	•JUMPER, BONDING	2	
		/ATTACHING PARTS/		
	MS35206-246	•SCREW	1	
	AN960D8	•WASHER	2	
	AN935-8	•WASHER	1	
	NAS679A08W	•NUT	1	
		----- * -----		
-10	200-324122-005	•PANEL ASSEMBLY	1	
		/ATTACHING PARTS/		
	MS35206-246	•SCREW	12	
	AN960D8	•WASHER	12	
		----- * -----		
-11	200-324122-017	••LID, BOX	1	
-12	200-324003-003	••KNOB	1	
		/ATTACHING PARTS/		
	MS24693-S32	••SCREW	1	
	AN960D6	••WASHER	1	
	NAS679A06W	••NUT	1	
		----- * -----		
-13	MS24693-S8	••SCREW	4	
	NAS679A04W	••NUT	4	
-14	SA-4	•INDICATOR, AIR SPEED (TKK)	1	
	or SA-40-1R			
		/ATTACHING PARTS/		
	NAS487-21	•NUT	4	
	MS35206-234	•SCREW	4	
		----- * -----		
-15	LA-4 or LA-40-1			
	or LA-71-11			
	or 5934-3			
	or 5934P-3			
	or 5934M-3			
	or 5934PM-3			
	or 5934D-3			
	or 5934PD-3	•INDICATOR, ALTIMETER (TKK or UI)	1	
		/ATTACHING PARTS/		
	NAS487-21	•NUT	3	
	MS35206-233	•SCREW	3	
		----- * -----		

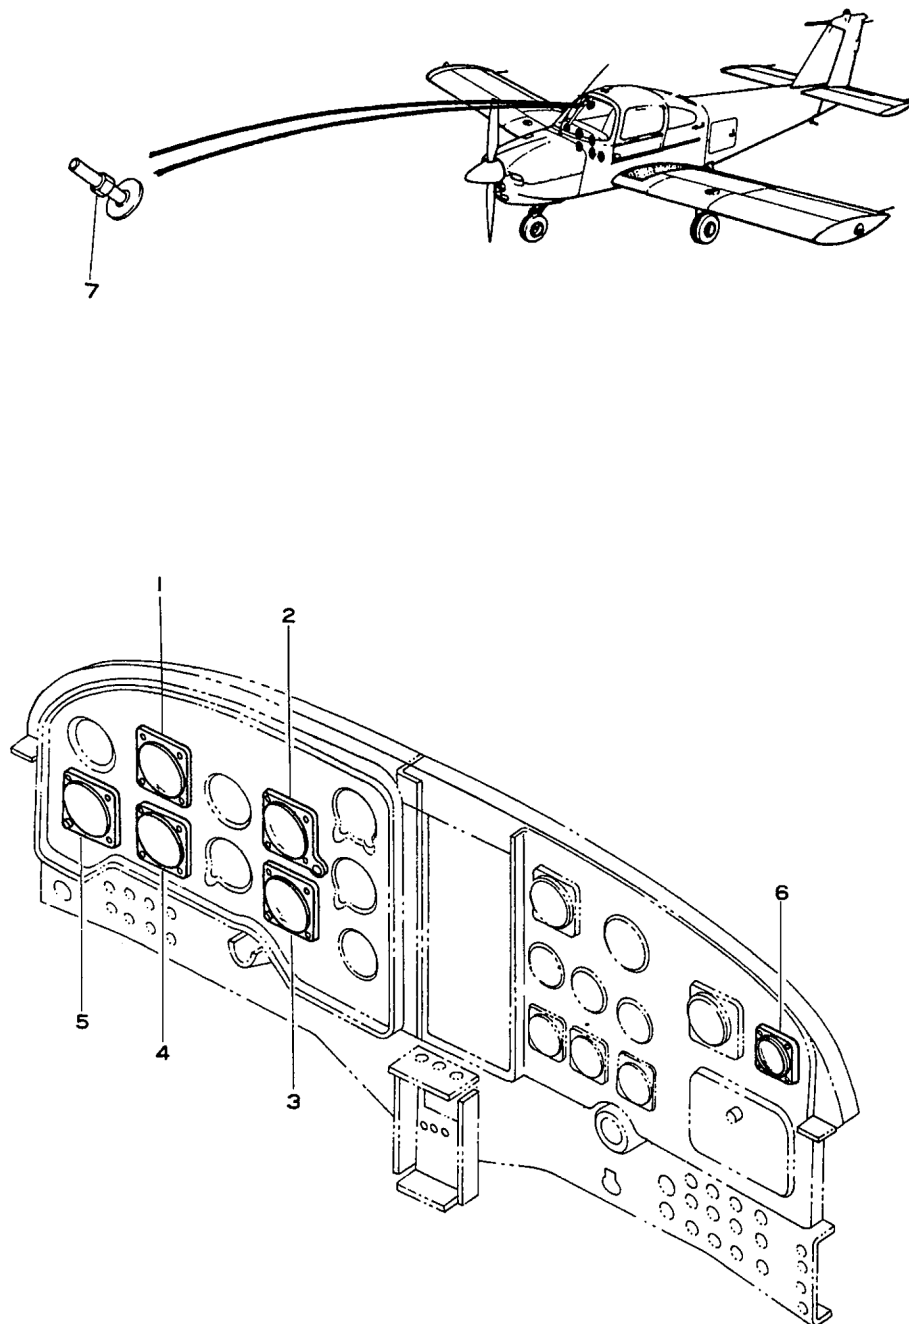 


FIGURE 26. INSTRUMENTS



FIG & INDEX NO.	PART NO.	DESCRIPTION	UNITS PER ASS'Y	USABLE ON CODE
		1234567		
26		INSTRUMENTS		
-1	SA-40-1RA or EA-5171-1	•INDICATOR AIR SPEED, KNOTS (TKK) •INDICATOR AIR SPEED /ATTACHING PARTS/	1 1	
	NAS487-13 MS35206-234	•NUT •SCREW ----- * -----	4 4	
-2	LA-40-1A or LA-40-1 or LA-4-1 or LA-71-11 or LA-71-11A or 5934-3 or 5934P-3 or 5934M-3 or 5934PM-3 or 5934D-3 or 5934PD-3	•INDICATOR, ALTIMETER (TKK or UI)..... /ATTACHING PARTS/	1	
	NAS487-13 MS35206-232	•NUT •SCREW ----- * -----	3 3	
-3	CA-52-1 or 22-201-01-1A or 7000C.2 or 7000C.31	•INDICATOR, RATE OF CLIMB (TKK or WS or UI) (DIAL CONFIGURATION: 7000C.2 (SOLID TYPE), 7000C.31 (SPLIT TYPE)) /ATTACHING PARTS/	1	
	NAS487-21 MS35206-234	•NUT •SCREW ----- * -----	3 3	
-4	TE-3 or 23-324-01	•INDICATOR, TURN AND SLIP (TKK or WS)..... /ATTACHING PARTS/	1	
	NAS487-21 MS35206-233	•NUT •SCREW ----- * -----	3 3	
-5	22-101-05-A AN5743-2 or A-11-90 or W-33-7510-ET	•CLOCK (WS or LW or WW)..... /ATTACHING PARTS/	1	
	NAS487-13 MS35206-232	•NUT •SCREW ----- * -----	2 2	
-6	MS28025-1 or 22-580-01-A or 22-580-05-1A	•ACCELEROMETER (TKK or TKS or WS)..... /ATTACHING PARTS/	1	
	NAS487-13 MS35206-232	•NUT •SCREW ----- * -----	3 3	
-7	2716 or OB-11-1A	•INDICATOR FREE AIR TEMP (SCI or TKK).....	1	